



SAFE BOX

INSTRUCTION MANUAL



Thank you for using our smart safe box, be able to operate the safe box better, please read manual first.

Hospitality Partner er professionel leverandør af services og produkter til hoteller og sundhedssektoren. Vores strategi er at tilbyde hoteller løsninger og produkter, der er omkostningseffektive eller kan generere flere indtægter gennem vores nye og innovative løsninger.

1. Security alerts

Install the safe before using it.

After installation, we recommend you to modify the Master Code immediately.

In addition, don't put mechanical key in the safe.

2. Main features

- 1) Solid, arch - welded heavy - gauge steel construction.
- 2) 18mm solid steel bolt for maximum security and durability.
- 3) Powered by 4 x AA 1.5V. automatic low battery level alert.
- 4) Digital display screen.
- 5) Inside Carpet.
- 6) Pre-drilled mounting holes on back and bottom.
- 7) 3-6 digit guest code and 6 digit master code.
- 8) 5 minutes freeze system in case of wrong code for 4 times.
- 9) Override mechanical key.

3. Lock the safe

Input any 3-6 digit code, then press "LOCK(#)". The display says "CLOSED" and the safe is locked.

To press "CLEAR(*)" before inputting digit code, the code is hidden on screen.

4. Open the safe

- 1) Open by personal code

Input your 3~6 digit code then "OPENED" display, the safe is opened.

- 2) Open by master code

Press "LOCK(#)" twice. The Display says "SUPER".

Then input Master code (factory default code is "000000"). The display says "OPENED" and the safe is opened.

- 3) Open by mechanical key (**in case code forgot or failure of electronic system**):

Insert key and turn it clockwise, the door is opened, while the display says "opened",

Enter new 3~6 digital code, press "LOCK(#)", the door is closed, then take out the key.

DO NOT use the key to open the safe on a regular base.

5. Change personal code

Input 3-6 digit new personal code, press "LOCK(#)"

6.To change the master code

- 1.Open the Safe.
- 2.Press “CLEAR(*)” key twice, the display will show “PROG”.
- 3.When “PROG” disappears, press the Master Code within 5 seconds, then press “LOCK(#)”.
(Factory Default Master Code is “000000”, If input password does not match with existing password then “ERROR” will be displayed.)
- 4.Display will show “NEU”, input 6 digit new Master Code & press “LOCK(#)”.
- 5.The display will show “done” to indicate new Master Code has been set up successfully.
(Note: Always perform the password changing operations with the door open and verify it 3-4 times before closing.)

WARNING:

For security purposes, you should change the factory default code as soon as possible. We shall not be responsible for the theft caused by such negligence.

Attention:

- 1) Press “CLEAR(*)” to erase when code is wrong.
- 2) If code is wrongly input, “E-CODE” will display, you can re-enter the code after beep sound.
- 3) wrongly input code by 4 times, “HOLD-5” display ,the safe will freeze for 5 minutes.
- 4) In case of the master code is forgotten, please find reset button on the PCB, press it and hold, disconnect the power supply on the safe box and then reconnect, “RESET” display, master code restore to factory default code (000000).

